

INSTALLATION MANUAL

45950

Level of Difficulty

Easy

Weight Capacity

Gross trailer weight (GTW)	15,000 lbs.
Tongue weight (TW)	1,500 lbs.

Parts List

Item	Qty	Description
1	1	Adjustable shank*
2	1	Pintle mount
3	2	Pin*
4	2	Clip*
5	4	Hex bolt
6	4	Lock washer

*Sold separately

Tools Required

Socket, 3/4"	Torque wrench
--------------	---------------

Maintenance

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

⚠ WARNING

Never exceed the vehicle manufacturer's recommended towing capacity. The ratings of the mount system are intended to represent the capability of the product and in no way reflect the ratings or capacity of the towing system it is being used with. The consumer or operator are strongly advised to learn the ratings of the various components of the towing system and never exceed the limits of the lowest rated component being used.

Never hook up trailer safety chains to the mount system. Ensure the safety chains operate freely around the mount system and do not become entangled.

Product Photo



NOTICE

Before you begin installation, read all instructions thoroughly.

Prior to towing, ensure all fasteners are tight and all structural components are sound. Using a torque wrench and 1/2" socket, torque hardware to 75 lb-ft.


Product Registration

CURT Group stands behind our products with industry-leading warranties. Provide feedback and help us to improve our products by registering your purchase at: warranty.curtgroup.com/surveys

ASSEMBLY & SETUP

Parts List

Item	Qty	Description
1	1	Adjustable shank*
2	1	Pintle mount
3	2	Pin*
4	2	Clip*
5	4	Hex bolt
6	4	Lock washer

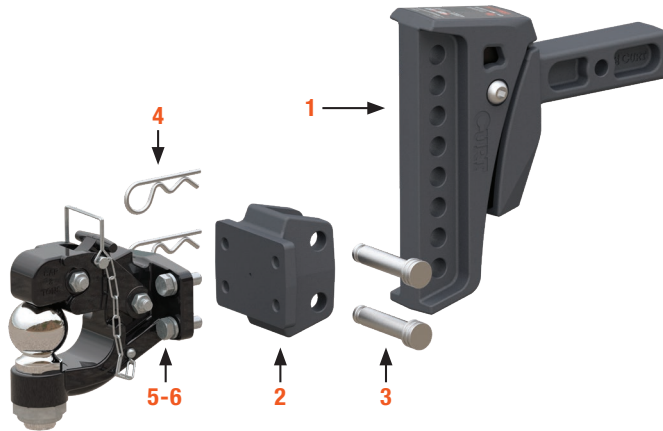

*Sold separately

Before you Begin

The Rebellion™ XD pintle mount accessory has a built-in anti-rattle feature located in the channel on the backside to keep your towing system quiet. See the recommended assembly instructions for optimal performance.




Step 1 - Insert into the Trailer Hitch

Begin by installing the shank (sold separately) into the trailer hitch receiver and secure it with a hitch pin and clip (sold separately).

Step 2 - Determine Required Ball / Hook Height

Determine the proper ball / hook height by leveling the trailer and measuring from the bottom of the trailer tongue to the ground, see below.

Find the hole closest to that measurement on the adjustable shank (#1). The pintle mount (#2) will be centered on that hole.

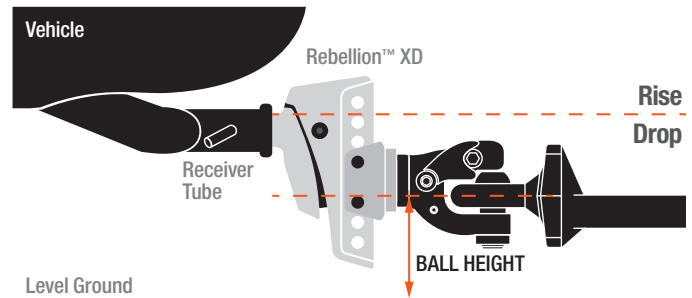

Step 3 - Attach the Pintle Mount

Based on the determined ball / hook height, slide the pintle mount onto the shank and align with the proper hole locations.


Angle the pintle mount slightly upwards and press in toward the shank. Insert a pin (#3) into the top tongue hole first. To pin the bottom pintle mount hole, apply downward force to the mount, and slide the second pin into place.

Note: The highest mounting position will require the bottom pin to be installed first with the mount angled downward. Then, apply force upwards to install the second pin.

Secure all pins with the clips included with your Rebellion™ XD.

⚠ WARNING

The pins included with your Rebellion™ XD shank are specifically engineered for this system. If replacement pins are needed, they must be replaced with original factory mount pins (CURT# 45959).

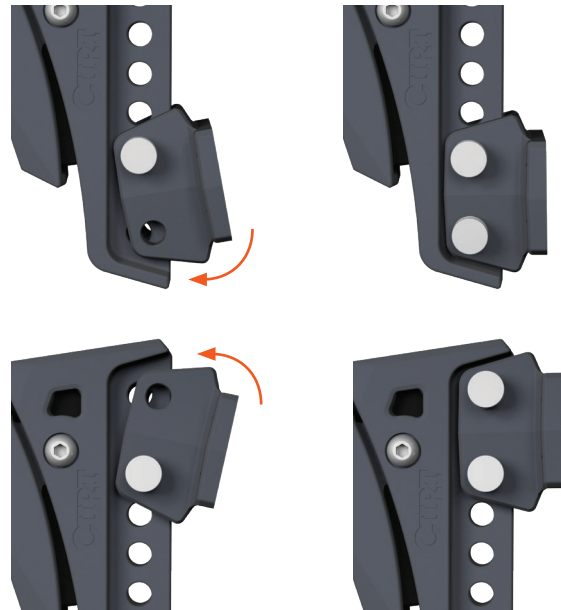

Step 4 - Install the Pintle Hook

Install the pintle hook with the supplied 1/2" hardware and torque to 75 lb-ft.